



MAINTENANCE INSTRUCTIONS For Maximum Appearance, Durability, and Slip-Resistance of Your ROCK-TRED Floor System

1. Pick up debris, sweep, and/or dust-mop daily.
2. Clean up all spills immediately, especially chemicals and any slippery substances
3. **Do not allow metal objects to drop or drag on the floor.
4. **Avoid using pallets with protruding nails or non-rolling equipment with sharp edges.
5. **Do not drag loads of any size or weight on the floor - lift a minimum of 3" above the floor before moving.
6. **Do not use swivel-steel wheels. Use rubber or poly tires on all vehicles. Non-marking tires are best.
7. **Do not permit lift trucks to make fast starts/stops or spin wheels.
8. Remove tire marks and/or spot clean weekly, if non-marking tires are not used.
9. Thoroughly scrub floors weekly with a solution of one part of ROCK-TRED's ROCK-POWER² to 15 parts clean, potable water. Flush/rinse and vacuum dry.
10. In high traffic areas for optimum long-range appearance, apply periodically an even coat of one of ROCK-TRED's Two-component Water-Based Urethanes.
11. **Avoid exposing floor to excessive and sudden temperature changes.
12. To maintain your initial slip-resistance, contact your ROCK-TRED representative.
13. Do not use any chlorine based detergents for a least 7 days after installation is complete.

****Mandatory provisions toward maintaining your ROCK-TRED warranty and the life of your floor**